

# NOVUS Configurators Guide

CONFIGURATOR	CONFIGURABLE PRODUCTS
<p><b>TxConfig USB</b> Configurator software + USB interface 8816021039</p> 	<p>TxBlock without USB, RHT 4-20 and 0-10 Temp-WM TxRail, TxIsoRail, old TxIsoBlock TxMiniBlock</p>
<p><b>TxConfig-HRT</b> HRT Configurator Modem + USB interface 8816021059</p> 	<p>TxIsoPack-HRT TxIsoRail-HRT NP800H NP860</p>
<p><b>TxConfig Pack</b> Configurator software + USB Micro B plug cable 8807000099</p> 	<p>TxIsoPack</p>
<p><b>TxConfig-USB NP</b> Configurator software + USB Interface (Pressure) 8816021049</p> 	<p>NP300</p>
<p><b>TxConfig DIN43650</b> Configurator software + USB interface (Pressure) 8816021069</p> 	<p>NP-600 NP-620 TxMini-DIN43650</p>
<p><b>TxConfig II</b> Configurator Software + USB Micro B plug cable 8806000420</p> 	<p>TxBlock-USB TxRail-USB</p>
<p><b>TxConfig-USB-M12</b> Configurator software + USB interface 8816021079</p> 	<p>TxMini-M12</p>
<p><b>NConfig Software</b> 8845000130</p> 	<p>N1540 N3000 N1040 N960 N1200 N480D N1100 N120 N1020 N1540TOT N1040i N1200HC N2000 N1040T</p>
<p><b>Optical Interface - Link3</b> USB + software 8813099050</p> 	<p>LogBox-DA LogBox-AA LogBox-RHT-LCD</p>
<p><b>LogChart II Software</b> No need of interface</p> 	<p>TagTemp Stick TagTemp-USB N120-DL</p>
<p><b>NFC-USB Interface</b> 8813099080</p> 	<p>TagTemp-NFC Thermo boxes</p>
<p><b>LogChart-NFC</b> ANDROID app</p> 	<p>TagTemp-NFC</p>
<p><b>DigiConfig</b></p> 	<p>DigiGate Profibus DigiRail-VA AirGate-Modbus DigiRail-2A AirGate-GPRS DigiRail-2R RHT-Modbus DigiRail-4C RHT-Air</p>
<p><b>TxDroid Config</b> OTG Cable + Micro USB Cable</p> 	<p>TxBlock-USB</p>
<p><b>FieldLogger Configurator</b> Included in FieldChart software</p> 	<p>FieldLogger</p>